



# Acer Iconia B1-711 Rear Battery Cover Removal

Written By: ZFix



## INTRODUCTION

Acer Iconia B1-711 - inside view.

How to remove Back / Battery cover.

[Please SUBSCRIBE to my channel ツ](#)

[video: [http://youtu.be/IQ7IExK\\_GxI](http://youtu.be/IQ7IExK_GxI)]

---



## TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Acer Iconia B1-711 Rear Battery Cover Removal



- Start opening from the micro USB connector.


## Step 2



- Insert wisdom here.





### Step 3

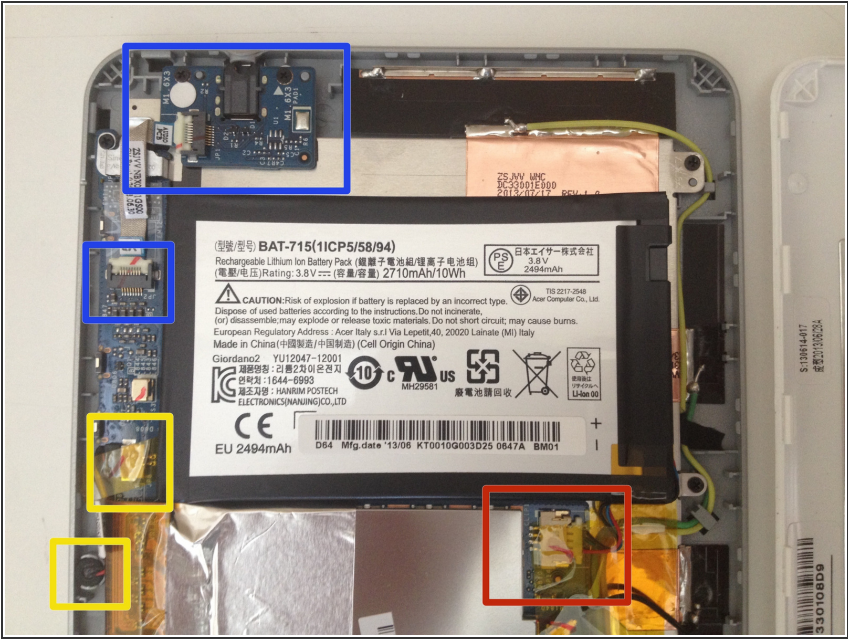

- Audio Jack Connector module
- Microphone
- Battery Connector

### Step 4

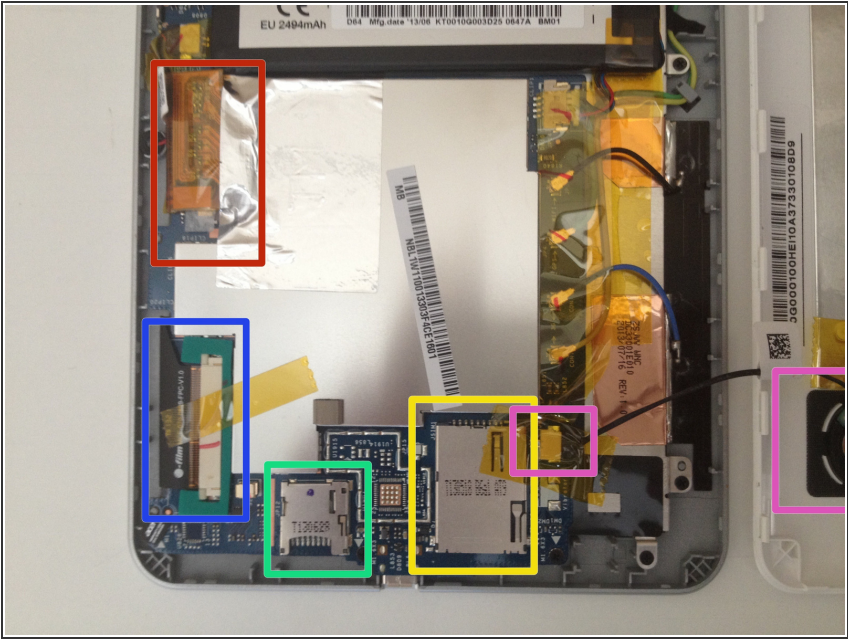

- LCD Display Cable Connector
  - Touchscreen Cable Connector
  - Micro SD Card Slod
  - SIM Card Slot
  - Loudspeaker
  - .
-  [Please SUBSCRIBE to my channel](#)

To reassemble your device, follow these instructions in reverse order.